


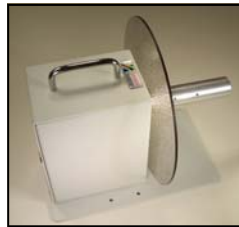

CSR30

Century CSR Series Universal Label Rewinder

- *Switched Bi-Directional Control*
- *Constant Adjustable Torque™ technology*
- *Adjustable Speed Control up to 15" (380-mm) per second*



CSR30



CSR30

Remove all parts from shipping container and verify contents.

Package Contents

- CSR30 Rewinder Unit
- AC-DC Adapter (Power Supply Module)
- Plastic Bag with 3-metal Fins, 6-Screws for the Fins, 6-Lockwashers, 1-hook-shaped Bail, and the User Manual (this document).

Retain the Shipping Container and Packaging for Storage and Transport.

- KEEP MANUAL IN A SAFE PLACE FOR FUTURE REFERENCE •

PRODUCT SPECIFICATIONS

Max. Label Width:	4.5 inches (115-mm)
Max. Label Roll Weight:	8.5 lbs. (3.9 kg)
Max. Label Roll Size:	Up to 8.5 inches (215-mm)
Speed:	Adjustable up to 15-ips (380-mm/sec)
Start/Stop:	ON/OFF/ON Direction Switch
Power Supply:	Voltage-selectable AC/DC Adapter 120vac 60Hz UL & CSA Listed (230vac 50Hz available)



WARNING

**This product is for indoor use only.
Not for use in wet locations.**



INITIAL SET-UP

1. Place the CSR30 with the Rewind Shaft perpendicular to the web of the labels to be rewound, and near where the labels come out of the printer. The CSR30 is bi-directional, so can be operated in either direction.
2. Verify that the (ON/OFF/ON Direction) Switch on the rear of the Unit is in the OFF (0) position.
3. Set the VOLT CHANGE SW Slide Switch on the AC/DC Adapter to the "4.5" position as an initial setting.
4. Insert the Power Cord into the Power Jack on the rear of the CSR30.
5. Plug the AC/DC Adapter into a suitable electrical outlet. It can be left plugged in at all times.
6. The CSR30 has a combination Power and Direction (ON/OFF/ON Direction) Switch on the Rear Panel. See photo below. The Center Position of the Switch is "OFF" (0). To make the Rewinder run to the right (looking from the rear of the Rewinder), press the Power / Direction Switch in the direction of the right arrow. To make the Rewinder run to the left, press the Power / Direction Switch in the direction of the left arrow.



REWINDING LABELS

Rewind Directly “On-Shaft” (“coreless”)

1. Slide the hook-shaped metal Bail onto the CSR30 Shaft. The straight end goes into the hole in the plastic Flange Plate. The curved end fits into the small hole in the outer end of the Shaft.
2. Insert the label web under the Bail and turn the Rewind Shaft by hand to secure the labels.
3. Place the CSR30 (ON/OFF/ON Direction) Switch to the ON position in the desired direction of operation, left or right.
4. Start the Printer and observe that the labels are being rewound correctly. You can adjust the VOLT CHANGE SW Slide Switch on the Power Supply Module to provide more or less rewind force.
5. When rewinding is finished, place the CSR30 (ON/OFF/ON) Switch in the OFF (0) position.
6. To remove the labels, first pull out the hook-shaped Bail from the center of the label roll. Then remove the labels.

Rewind on a 3-inch Cardboard Core

1. To use a 3-inch cardboard core, install the 3-stainless steel Fins onto the Rewind Shaft of the CSR30 using the 6-screws provided. DO NOT USE THE LOCKWASHERS. For narrow cores, orient the Fins next to the plastic Flange. Slide an empty cardboard core over the Fins and up against the plastic Flange Plate.
2. NOTE: IF CORE IS TOO LOOSE, remove only one of the Fins and place a supplied #8 split ring Lock washer on each screw BETWEEN THE VANE AND THE SHAFT. Retighten the Screws securely. Add Lock-washers under additional Fins if necessary.
3. Use a piece of masking tape to secure the label web to the cardboard.
4. Place the CSR30 (ON/OFF/ON Direction) Switch to the ON position in the desired direction of operation, left or right.
5. Start the printer and observe that the labels are being rewound correctly. You can adjust the VOLT CHANGE SW Slide Switch on the Power Supply Module to provide more or less rewind torque.
6. When rewinding is finished, place the CSR30 (ON/OFF/ON Direction) Switch in the OFF (0) position.
7. Slide the cardboard core and the labels off the CSR30.

UNWIND FEATURE

To use the CSR30 as an Unwinder, place the VOLT CHANGE SW to the “1.5” position and place the (ON/OFF/ON Direction) Switch in the reverse direction to provide resistance to the roll of labels you wish to unwind.

MAINTENANCE

The CSR30 Rewinder requires no maintenance.



2629 Valley Pike, Dayton, OH 45404 USA
(937) 237-2001 FAX (937) 237-1595
Toll-Free (800) 228-3606 in USA
sales@centurysystems.com

www.centurysystems.com